



Black wire  
GND

Black and  
White wire  
SIGNAL

**ATTENTION:** During installation make sure that **BLACK** wire connected to the GND and **BLACK AND WHITE** wire connected to the IR output of the control card.



Black wire  
GND

Black and  
White wire  
SIGNAL

**ATTENTION:** During installation make sure that **BLACK** wire connected to the GND and **BLACK AND WHITE** wire connected to the IR output of the control card.